

ARM-JTAG-SWD



ARM JTAG SWD ADAPTER FOR OPENOCD AND CROSSWORKS

FEATURES

- Plug-in adapter for ARM-USB-OCD, ARM-USB-OCD-H, ARM-USB-TINY, ARM-USB-TINY-H which allows ARM processors which support SWD (like LPC1343) to be programmed/debugged.
- works with ROWLEY CrossWorks
- dimensions 50x40 mm (2x1.6") + 20 cm (8") JTAG cable

DOCUMENTS

- **IMPORTANT:** Connect the adapter to Olimex programmers in the following way:
JTAG Programmer - SWD interface - JTAG cable;
i.e. connect the SWD adapter directly to the programmer with no cable in-between them!



HARDWARE

- [ARM-JTAG-SWD schematic](#)

SOFTWARE

- [CrossWorks](#) - Rowley CrossWorks support SWD with any of our OCD JTAGs and ARM-JTAG-SWD

FAQ

-  **Does ARM-JTAG-SWD works with ARM-JTAG-EW?**
 - No, this is not necessary as ARM-JTAG-EW supports SWD without need of adapter board.
-  **Does ARM-JTAG-SWD work with OpenOCD?**
 - For the moment only Rowley CrossWorks support ARM-JTAG-SWD, but the support in OpenOCD is easy to be impleme and this will happen soon ;)